

# Standard partlist for RT3500S(H,L)

Pos	article-No.	description	number	category	remark
	<b>RT3500S(H,L)</b>	<b>welding torch</b>	<b>1</b>	<b>RM27</b>	1.2 tip is installed
1	L10603B00	Torch boddy assy	(1)	RP34	Straight
2	L10605B00	Torch boddy assy	1	RP34	For 45° curved torch
3	L10604B00	Torch boddy assy	(1)	RP34	For 31° curved torch
4	3574-017	"O"-ring	1	RP34	
5	100-0602	Parallel key	1	RP34	
6	L10603B04	Teflon bushing	2	RP34	
7	L10603C01	Tip body	1	RP34	
8	L10603D01	Insulator	1	RP34	Packing Unit 5 pcs.
9	L6380F01	Spring washer	1	RP34	
10	U4167G02	Orifice	1	RP34	Packing Unit 10 pcs.
11	L7250B04	Contact tip 1.2	1	RP32	Packing Unit 10 pcs. 1
12	L7250B01	Contact tip 0.8	(1)	RP32	Option, Packing Unit 10 pcs.
13	L7250B02	Contact tip 0.9	(1)	RP32	Option, Packing Unit 10 pcs.
14	L7250B03	Contact tip 1.0	(1)	RP32	Option, Packing Unit 10 pcs.
15	L7250B05	Contact tip 1.4	(1)	RP32	Option, Packing Unit 10 pcs.
16	L7250B06	Contact tip 1.6	(1)	RP32	Option, Packing Unit 10 pcs.
17	L10603C02	Nozzle No.8	1	RP32	
18	L10603C03	Nozzle No.10	(1)	RP32	Option

