

# Standard partlist for RT5000S(H,L)

Pos	article-No.	description	number	category	remark
	<b>RT5000S(H,L)</b>	<b>welding torch</b>	<b>1</b>	<b>RM27</b>	1.2 tip is installed
1	L10606B00	Torch boddy assy	(1)	RP34	Straight
2	L10608B00	Torch boddy assy	1	RP34	For 45° curved torch
3	L10607B00	Torch boddy assy	(1)	RP34	For 31° curved torch
4	3574-017	"O"-ring	1	RP34	
5	100-0602	Parallel key	1	RP34	
6	L10603B04	Teflon bushing	2	RP34	
7	L10606C01	Tip body	1	RP34	
8	L6218C01	Tip holder	1	RP32	Packing Unit 5 pcs.
9	U5377L00	Insulator	1	RP32	Packing Unit 5 pcs.
10	L6573C02	Spring washer	1	RP34	
11	U2774E03	Orifice	1	RP32	Packing Unit 10 pcs.
12	L7250B04	Contact tip 1.2	1	RP32	Packing Unit 10 pcs.
13	L7250B01	Contact tip 0.8	(1)	RP32	Option, Packing Unit 10 pcs.
14	L7250B02	Contact tip 0.9	(1)	RP32	Option, Packing Unit 10 pcs.
15	L7250B03	Contact tip 1.0	(1)	RP32	Option, Packing Unit 10 pcs.
16	L7250B05	Contact tip 1.4	(1)	RP32	Option, Packing Unit 10 pcs.
17	L7250B06	Contact tip 1.6	(1)	RP32	Option, Packing Unit 10 pcs.
18	U2774E01	Nozzle No.12	1	RP32	
19	U2774E04	Nozzle No.10	(1)	RP32	Option

