

Standard partlist for RZ3500S(H,L)

Pos	article-No.	description	number	category	remark
	RZ3500S(H,L)	welding torch	1	RM27	1.2 tip is installed
1	L10612B00	Torch boddy assy	1	RP34	Straight
2	L10614B00	Torch boddy assy	(1)	RP34	For 45° curved torch
3	L10613B00	Torch boddy assy	(1)	RP34	For 31° curved torch
4	3574-017	"O"-ring	1	RP34	
5	100-0602	Parallel key	1	RP34	
6	L10603B04	Teflon bushing	2	RP34	
7	4739-469	Coil spring	1	RP34	
8	L10612C03	Pressuring shaft	1	RP34	
9	L10612C02	Rear tip body	1	RP34	
10	U5626X00	Insulator	2	RP32	Packing Unit 5 pcs.
11	L6573C02	Spring washer	1	RP34	
12	U5685M02	Orifice	1	RP32	
13	L10669C02	Collet nut 0.9	(1)	RP32	Option
14	L10669C03	Collet nut 1.0	(1)	RP32	Option
15	L10669C04	Collet nut 1.2	1	RP32	
16	L10669C05	Collet nut 1.4	(1)	RP32	Option
17	L10669C06	Collet nut 1.6	(1)	RP32	Option
18	L10612C01	Front tip body	1	RP32	
19	L10669B01	Tip holder 0.9-1.0	(1)	RP32	Option
20	L10669B02	Tip holder 1.2	1	RP32	
21	L10669B03	Tip holder 1.4	(1)	RP32	Option
22	L10669B04	Tip holder 1.6	(1)	RP32	Option
23	L10612C06	Nozzle No.10	1	RP32	
24	L10612C04	Nozzle No.8	(1)	RP32	Option
25	L10612C05	Nozzle No.12	(1)	RP32	Option

